

# MEANING OF THE LED INDICATION OF ADM100/300/700/007/333 TRACKERS

## Firmware update via USB/Bluetooth

Short single flashes

Does not flashes

## GPRS update (via **UPDATE** command)

CONTINUOUS LONG FLASHES (except for ADM700),  
CONTINUOUSLY LIGHT (ADM700)

SERIES OF 3 FLASHES  
The GSM module is disabled for reinitialization

SERIES OF 2 FLASHES  
There is no connection to the update server

SERIES OF 1 FLASH  
The tracker has established a connection to the update server

## GLONASS/GPS module status

### SERIES OF 4 FLASHES

The GLONASS/GPS module is disabled due to low internal battery voltage and disconnected external power supply (for a tracker with built-in battery)

### SERIES OF 3 FLASHES

No data is receiving from the GLONASS/GPS module at the moment

### SERIES OF 2 FLASHES

Data from the GLONASS/GPS module is received, but coordinates are invalid

### SERIES OF 1 FLASH

The GLONASS/GPS module determined the date, time and actual coordinates

## GSM/GPRS module status

CONSTANTLY FLASHES, WITH SHORT PAUSES  
The SIM card is unavailable

### SERIES OF 4 FLASHES

The GSM module is disabled due to low internal battery voltage and disconnected external power supply (for a tracker with built-in battery)

### SERIES OF 3 FLASHES

The GSM module is disabled

### SERIES OF 2 FLASHES

The GSM module is turned on, but there is no connection with the server or the GPRS service is not available

### SERIES OF 1 FLASH

The tracker has established a connection to the server and successfully transmits information packets